
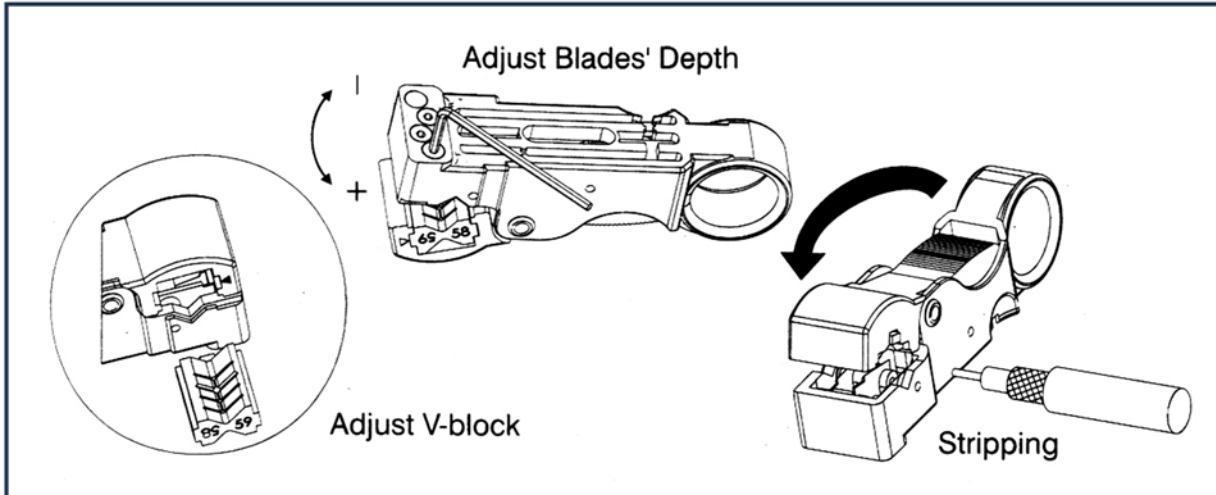


HT-312S Coaxial Cable stripper

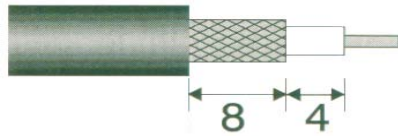

Instructions

- **Blades' Depth:** You may use the hex wrench, which is install on the bottom of the tool to adjust the blades' depth. Insert the hex wrench into the blade depth adjuster on the bottom of the stripper, then rotate the hex wrench clockwise (to cut smaller cable) or counterclockwise (to cut larger cable). Repeat above steps to set the other blade.
- **Stripping cable:**
 1. Use hex wrench to push the V-block out of the housing, align the character on the V-block with the arrow, and then insert the V-block into its housing. The indicated arrow ◀ recommended the RG cable size mark in front of the V-block. The v-block is reversible.
 2. Press the knurled portion on the upper jaw to open the stripper's jaws.
 3. Insert the cable you want to strip through the V-block until the cable reaches the V-shaped cable guide. Then release the upper jaw to close the jaws.
 4. Insert your index finger into the stripper's finger ring, turn the stripper clockwise 3-5 times. The cable's insulation is cut while you turn the stripper.
 5. Open the jaws and remove the cable. Pull away the outer jacket and dielectric to expose the inner conductor.

TH-	FOR STRIPPING RG CABLE	STRIPPING DISTANCE
312A	RG-59/62/6/4C/5C	3 BLADES MODEL 
312B	RG-58/59/62/3C/4C	
312X	FOR CABLE O.D FROM 3.5fmin	
312S	FOR BIG CABLE O.D AROUND 10.5f SUCH AS RG-213	